



Franklin Fueling Systems



S4F2 Whip Hose Assembly

Field Replacement Label Application

1. Remove any loose dirt and/or debris from Healy S4 (1 $\frac{1}{8}$ " balance threaded) whip hose fitting ferrule with mild detergent and Scotchbrite pad (or equivalent).



2. Using a lint free cloth and isopropyl alcohol (or equivalent), thoroughly clean the surface of residue on the whip hose fitting ferrule.




3. Remove label from backing paper and apply to clean, dry whip hose fitting ferrule surface with proper gasoline flow direction. Reference Executive Order VR-201/VR-202 Exhibit 1 Figure 1A-7 or Figure 1A-8 for gasoline flow details.



4. Rub surface of label with thumb to ensure complete contact of label with whip hose fitting ferrule surface.



See Executive Order VR-201/VR-202 for complete hanging hardware details.

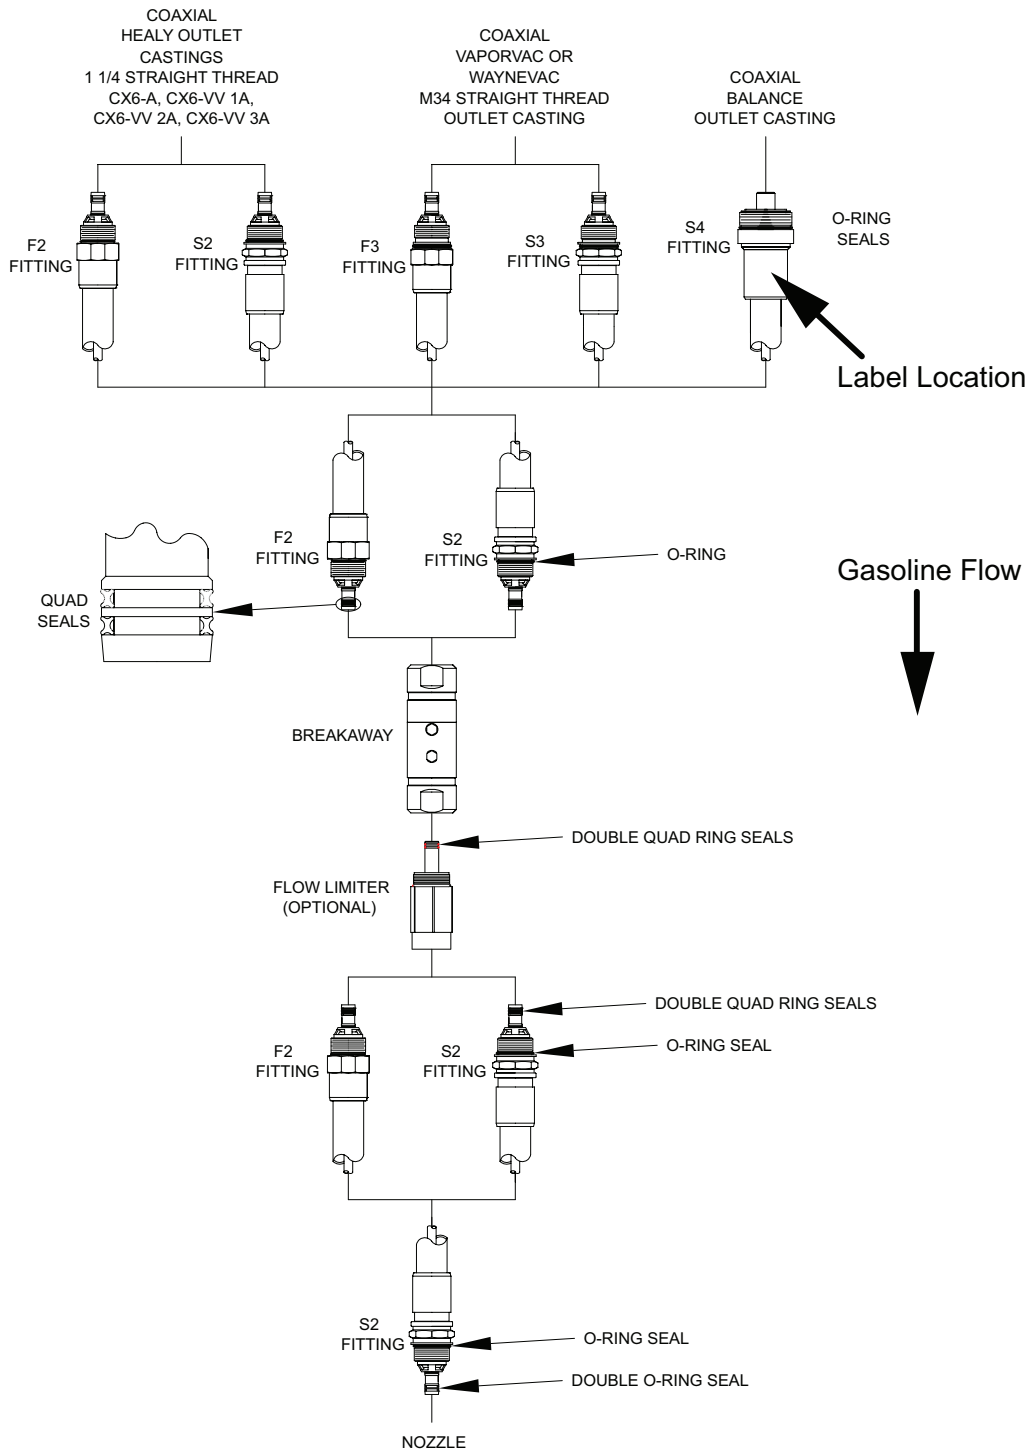

Franklin Fueling Systems

www.franklinfueling.com

3760 Marsh Road • Madison, WI 53718, U.S.A.

Tel: +1 608 838 8786 • Fax: +1 608 838 6433

Tel: USA & Canada 1 800 225 9787 • Tel: México 001 800 738 7610

Franklin Fueling Systems GmbH

Rudolf-Diesel-Strasse 20 • 54516 Wittlich, GERMANY

Tel: +49-6571-105-380 • Fax: +49-6571-105-510