


COMPOSITE ACCESS COVER HANDLING & REMOVAL

Check out these simple handling and cover removal tips to help you extend the service life of your PCR090 and PCR106 composite access covers:


- Do **NOT** throw off the back of vehicles; covers and frames must be LIFTED and placed on the ground.
- Do **NOT** roll or drop covers or frames.
- Care should be taken to ALWAYS clean the seating face of the frame before the cover is inserted.
- ALWAYS wear proper personal protective equipment to prevent injury.

COVER REMOVAL: Follow these steps to ensure safe and proper cover removal and replacement.

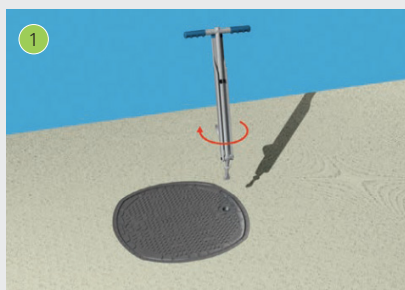


Removal

Insert the lifting tool into the lock aperture as shown and turn the handle through 90 degrees clockwise towards you.

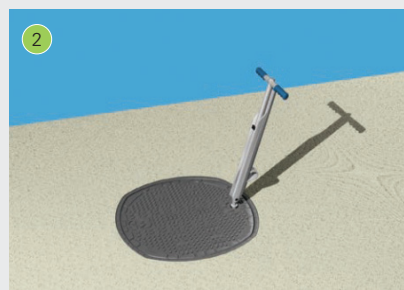


Removal

With the handle facing towards you, the cover lock is now disengaged and ready to be removed from its frame.

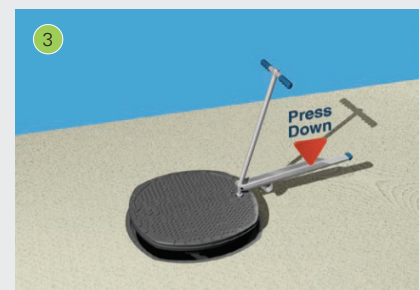

Removal

Release the seal breaker from the lifting tool and press down on the foot pedal to release the cover from its frame.

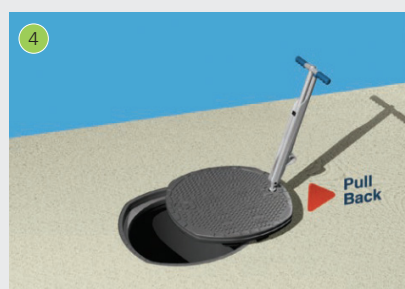


Removal

Fold back the seal breaker into the lifting tool. Lift the edge of the cover until it is free of the frame. Pull the cover out of the frame.



Replacement

Using the lifting tool push the cover back into the frame. Step down on the cover to re-engage the seal.

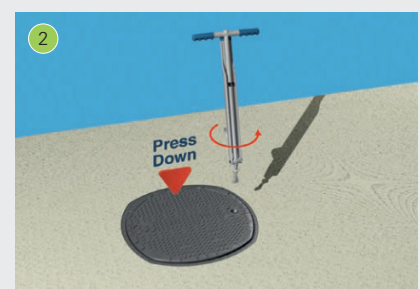

Replacement

Turn the lifting tool back through 90 degrees counter clockwise to engage the lock and remove the lifting tool.